



POWERVIEW Analog Gages PVA20 & PVA35 Installation Instructions

PVA-02126N
Revised 2016-03-03
Section 78
00-02-0532



Please read the following information before installing. A visual inspection of this product for damage during shipping is recommended before mounting. It is your responsibility to have a qualified person install this unit.

GENERAL INFORMATION

WARNING

BEFORE BEGINNING INSTALLATION OF THIS MURPHY PRODUCT

- ✓ Disconnect all electrical power to the machine.
- ✓ Make sure the machine cannot operate during installation.
- ✓ Follow all safety warnings of the machine manufacturer.
- ✓ Read and follow all installation instructions.

Description



CAUTION: These instruments are designed to be used ONLY with the MurphyLink™ PowerView module or other approved MurphyLink™ PowerView products.

The PowerView Analog Gages (PVA) are a series of intelligent gages designed to display easy-to-read information transmitted by the PowerView. The PVA gages communicate with the PowerView via a single RS485 twisted pair MODBUS® RTU serial link. The gages can be daisy-chained using quick-connect harnesses with watertight connectors.

The PVA gages also include features such as a smooth stepper motor operation for the 270° sweep pointer, an environmentally sealed case with two Deutsch DT style connectors molded into the casing, and green LED backlighting. They are available for standard 2-1/16 in. (52 mm) and 3-3/8 in. (86 mm) diameter hole sizes. In addition their plastic cases incorporate a “D” shape allowing panel cutouts that eliminate gage rotation during installation.

The PowerView Audible Alarm (PVAA) alerts operators to fault conditions via piezoelectric alarm and relay contacts. It also has a temporary silencer button that silences the audible tone for 2 minutes on alarms and 30 seconds on shutdown conditions.

All PowerView Gages can be powered by 12 or 24 VDC systems.

PVA20 Series Models: 2 inch size gages:

- PVA20 -A = Engine Oil Pressure
- PVA20 -B = Coolant Temperature
- PVA20 -C = Voltmeter
- PVA20 -D = Percent Load at Current RPM
- PVA20 -E = Transmission Oil Pressure
- PVA20 -F = Transmission Oil Temperature
- PVA20 -G = Engine Oil Temperature
- PVA20 -T = Tachometer
- PVAA20 = 2 inch dial audible alarm gage

PVA35 Series Models: 3-1/2 in. size gages:

PVA35 -T (Tachometer) = PVA35 -S (Speedometer)

Warranty

A limited warranty on materials and workmanship is given with this Murphy product. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/warranty.



PVA35 Series

PVA20 Series

Specifications

Power Supply Input Voltage: 12/24V (8-32VDC min. & max. voltage).

Power Supply Operating Current: (@ 14 VDC) =

PVA20, PVA35: 28 mA minimum; 52 mA maximum.

PVAA20: 19 mA minimum; 46 mA maximum.

Backlight Maximum Current (not applicable to PVAA20): 24 mA.

Input: RS485 MODBUS® RTU data.

Output: Analog Readout.

Relay Rated Load (PVAA20): 0.5 A, 125 VAC; 1 A, 24 VDC.

Relay Maximum Switching Capacity (PVAA20): 62.5 VA, 30W.

External Audible Alarm Output (PVAA20): 28 VDC, 30 mA max. (current sink).

Temporary Silence Button (PVAA20): Charge transfer technology.

Operating Temperature: -40° to 185°F (-40° to 85°C).

Storage Temperature: -76° to 185°F (-60° to 85°C).

Dial: White numerals over black background.

Indicating Pointer: Stepper motor operation with 270° sweep.

Gage Accuracy: PVA20: Better than ±1.0% of scale.

PVA35: Better than ±2% of scale.

Environmentally Sealed Enclosure:

Sealing: IP68, ±5 psi (±34.4 kPa).

Case and Clamp Material: Polycarbonate / Polyester (PC + PBT)

Lens Material: Polycarbonate.

Bezel Material: ABS

Maximum Panel Thickness: 3/8 in. (9.6 mm).

Connectors: 6-Pin Deutsch DT06 Series

Vibrations: Random: 7.86 Grms (5-2,000 Hz), 3 axes

Shock: ±50G, 3 axes

Electromagnetic Compatibility:

PVA: 2014/30/EU & 2014/35/EU

IEC 60945: 2002 (CISPR 16-1 & 16-2-1)

PVAA: 89/336/EEC


EN 61000-6-4 : 2001

EN 61000-6-1 : 2001


† MurphyLink is a registered trademark of Enovation Controls, LLC. All other trademarks and service marks used in this document are the property of their respective owners.

PVA SERIES20 and PVA SERIES35 Dimensions and Mounting

PVA20 and PVAA Series Typical Installation and Mounting Dimensions

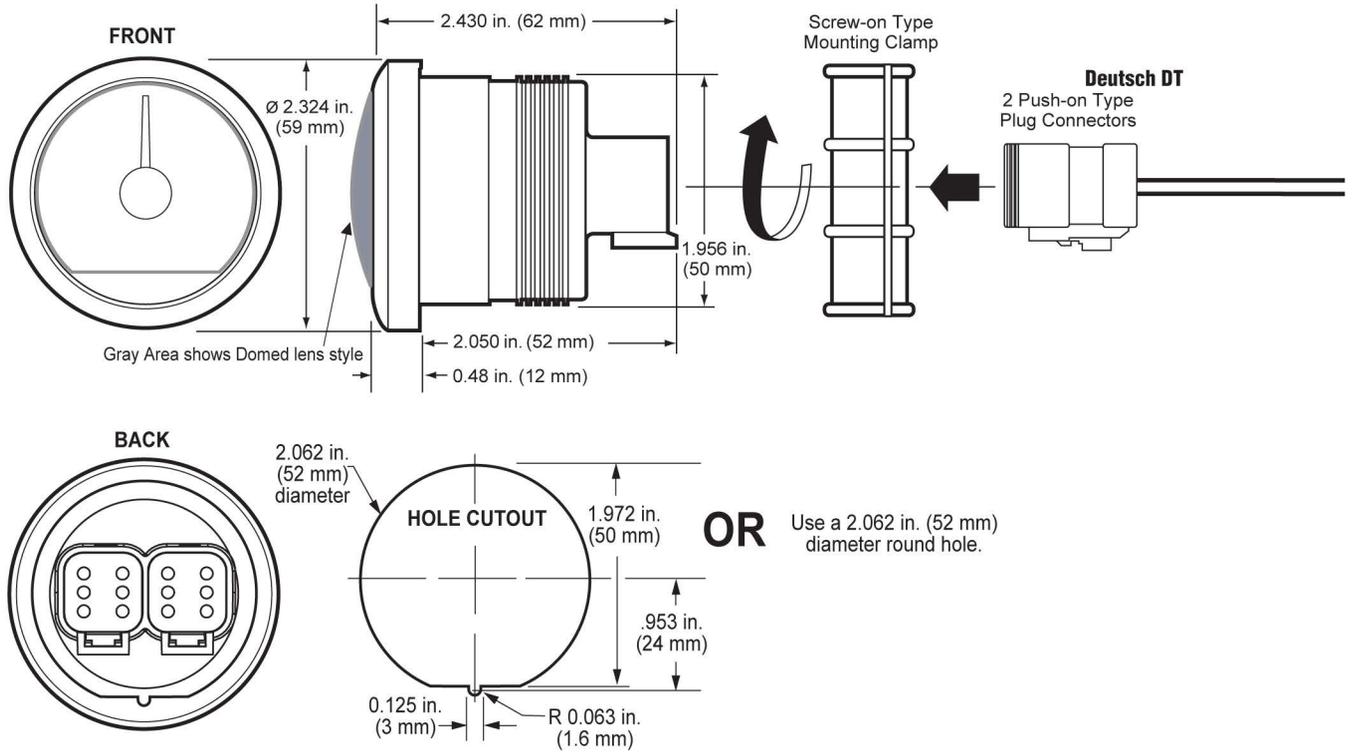

PVA35 Series Typical Installation and Mounting Dimensions

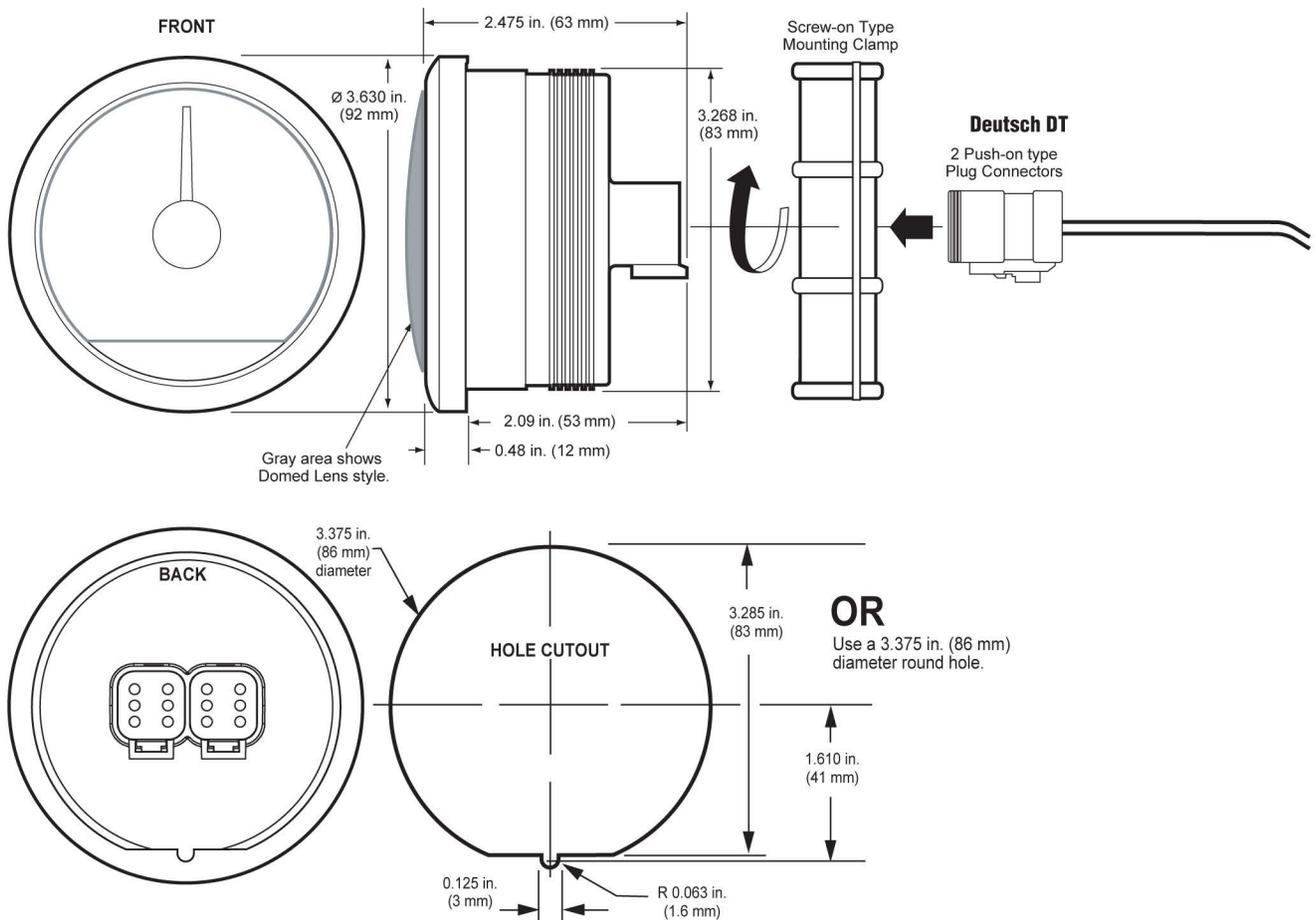


PVA20, PVA35 and PVAA SERIES Typical Wirings For 12 and 24 VDC



WARNING: Disconnect battery negative cable before wiring or service. Devices containing solid state components can be damaged or caused to malfunction when used in systems which incorporate inductive loads (e.g. relays, solenoids, etc.) that can generate voltage spikes. To reduce the potential for this type of damage, install a fly back or clamping diode across all inductive loads. Use Murphy diode package 65-00-0343 or equivalent. A typical diode is 1N4005 and is readily available from commercial sources. Failures of this type are not covered by our Limited Warranty.


PowerView Gages Back View Deutsch DT06-6S Style Connections

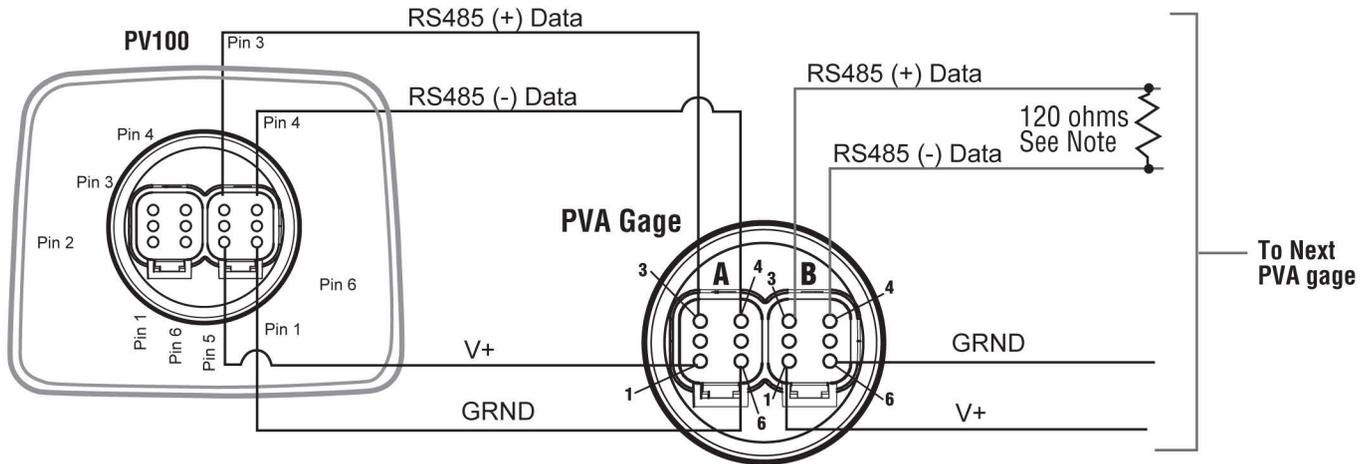

Note: Place Resistor between RS485+ and RS485- at end of Line on last PVA gage (included in PVJR or factory purchased panels).

IMPORTANT: To eliminate external interference: RS485(+) and RS485(-) should be twisted pair cable or twist wires together, one twist per inch minimum. (RS485 wire for example: BELDEN 9841 or 3105A).

PVAA Audible Alarm Back View Deutsch DT06-6S Style Connections


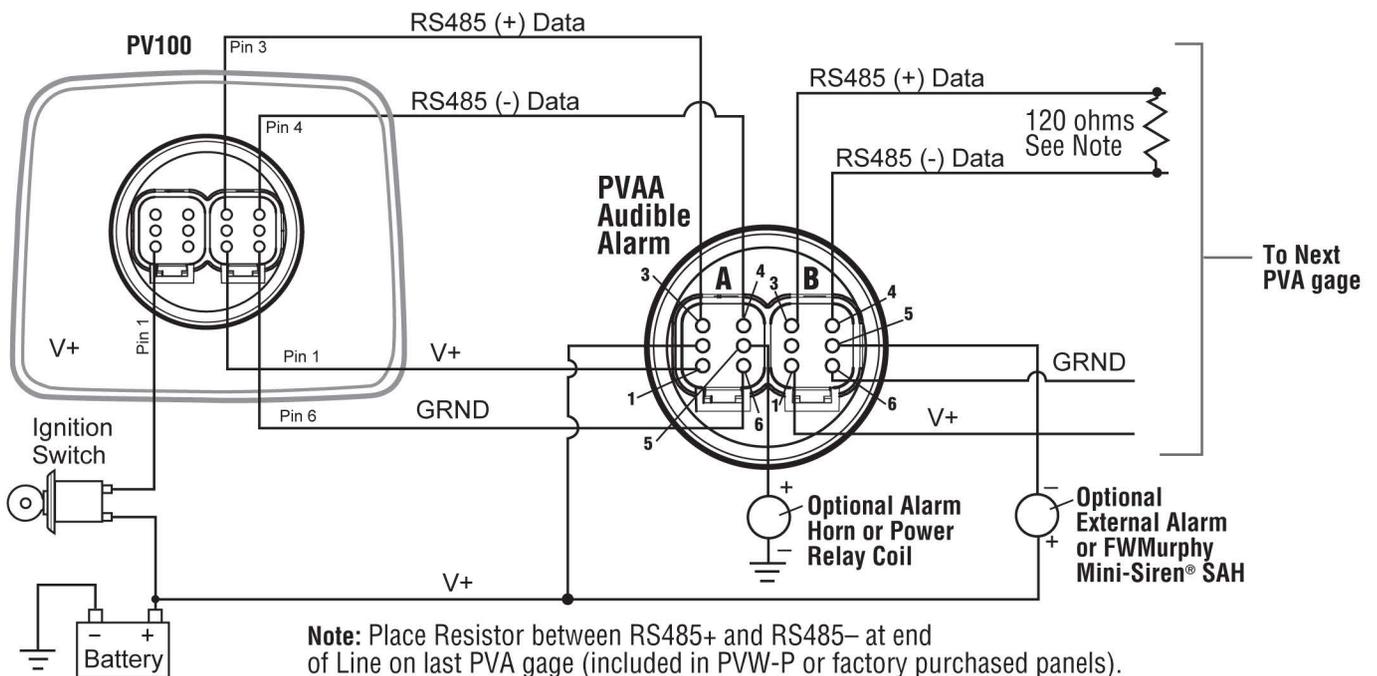


Note: Place Resistor between RS485+ and RS485- at end of Line on last PVA gage (included in PVW-P or factory purchased panels).

Typical Connectors PIN Designation

**PowerView Gages Back View
Deutsch DT06-6S Style Connections**


**PowerView Audible Alarm Back View
Deutsch DT06-6S Style Connections**

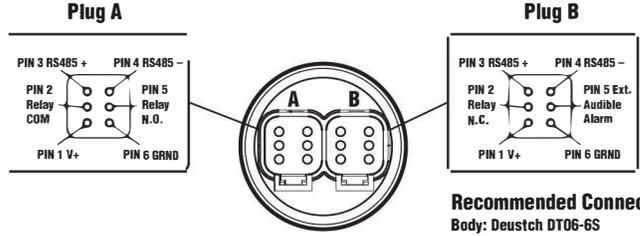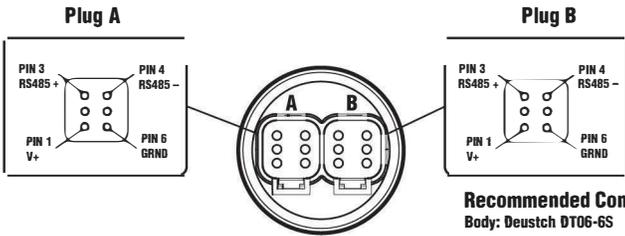

Recommended Connectors:
Body: Deutsch DT06-6S
Wedge Lock: W6S
Terminals: 0462-201-16141
Sealing Plug: 114017

Recommended Connectors:
Body: Deutsch DT06-6S
Wedge Lock: W6S
Terminals: 0462-201-16141
Sealing Plug: 114017

Typical Quick-Connect Diagram

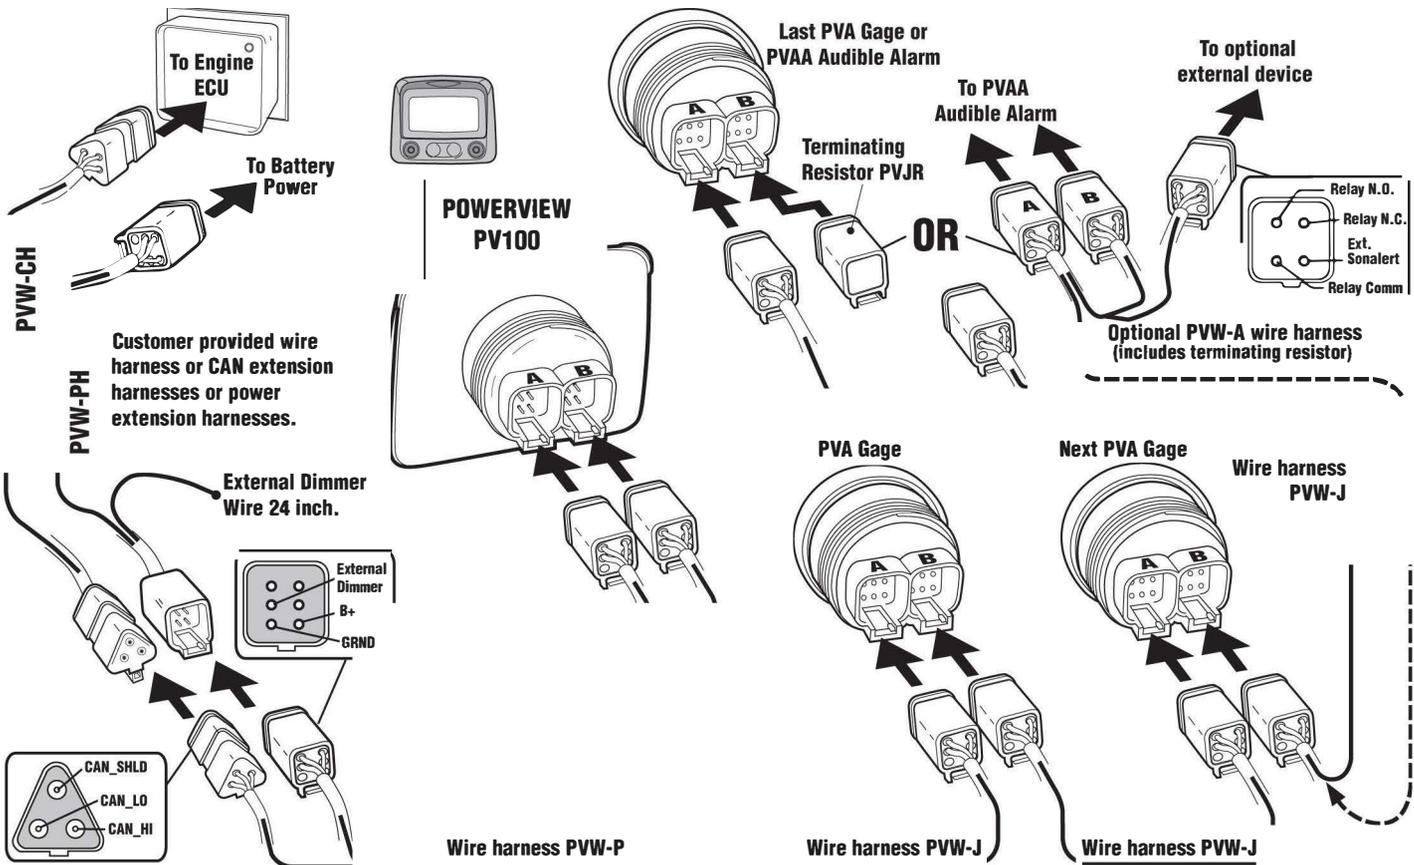

ENOVATION CONTROLS CORPORATE HEADQUARTERS
5311 S 122ND EAST AVENUE
TULSA, OK 74146

ENOVATION CONTROLS – SAN ANTONIO OFFICE
5757 FARINON DRIVE
SAN ANTONIO, TX 78249

ENOVATION CONTROLS – HOUSTON OFFICE
105 RANDON DYER RD
ROSENBERG, TX 77471

ENOVATION CONTROLS LTD. – UNITED KINGDOM
CHURCH ROAD LAVERSTOCK
SALISBURY SP1 1QZ UK

MURPHY ECONTROLS TECHNOLOGIES (HANGZHOU) CO, LTD.
77 23RD STREET
HANGZHOU ECONOMIC & TECHNOLOGICAL DEVELOPMENT AREA
HANGZHOU, ZHEJIANG 310018 CHINA

U.S. SALES & SUPPORT

ECONTROLS PRODUCTS
PHONE: 210 495 9772
FAX: 210 495 9791
EMAIL: INFO@ENOVATIONCONTROLS.COM
WWW.ECONTROLS.COM

MURPHY PRODUCTS
PHONE: 918 317 4100
FAX: 918 317 4266
EMAIL: SALES@ENOVATIONCONTROLS.COM
WWW.FWMURPHY.COM

MURPHY CONTROL SYSTEMS & SERVICES
PHONE: 918 317 4500
FAX: 281 633 4588
EMAIL: CSS-SOLUTIONS@ENOVATIONCONTROLS.COM

MURPHY INDUSTRIAL PANEL DIVISION
PHONE: 918 317 4100
FAX: 918 317 4124
EMAIL: IPDSALES@ENOVATIONCONTROLS.COM

INTERNATIONAL SALES & SUPPORT

UNITED KINGDOM
PHONE: +44 1722 410055
FAX: +44 1722 410088
EMAIL: SALES@ENOVATIONCONTROLS.EU
WWW.FWMURPHY.EU

CHINA
PHONE: +86 21 6237 5885
FAX: +86 21 6237 5887
EMAIL: APSALES@ENOVATIONCONTROLS.COM

LATIN AMERICA & CARIBBEAN
PHONE: 918 317 2500
EMAIL: LASALES@ENOVATIONCONTROLS.COM

SOUTH KOREA
PHONE: +82 70 7951 4100
EMAIL: SKOREASALES@ENOVATIONCONTROLS.COM

INDIA
PHONE: +91 91581 37633
EMAIL: INDIASALES@ENOVATIONCONTROLS.COM



FM 28221 (Tulsa, OK - USA)
FM 620667 (San Antonio, TX - USA)
FM 28221 (Rosenberg, TX - USA)
FM 29422 (UK)



FM 523851 (China) TS 589322 (China)

Printed in the USA

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time.